


# 274DS

## ASSEMBLY AND ADJUSTMENT INSTRUCTIONS

Before beginning the assembly, please check that all parts are enclosed.


PART LIST:	1 back with slider	1 base
	1 seat with seat base	5 castors
	1 gas lift	4 screws M8x16
	2 arms	4 screws M6x16
	2 allen keys	2 screws M6x25
	2 bushes	

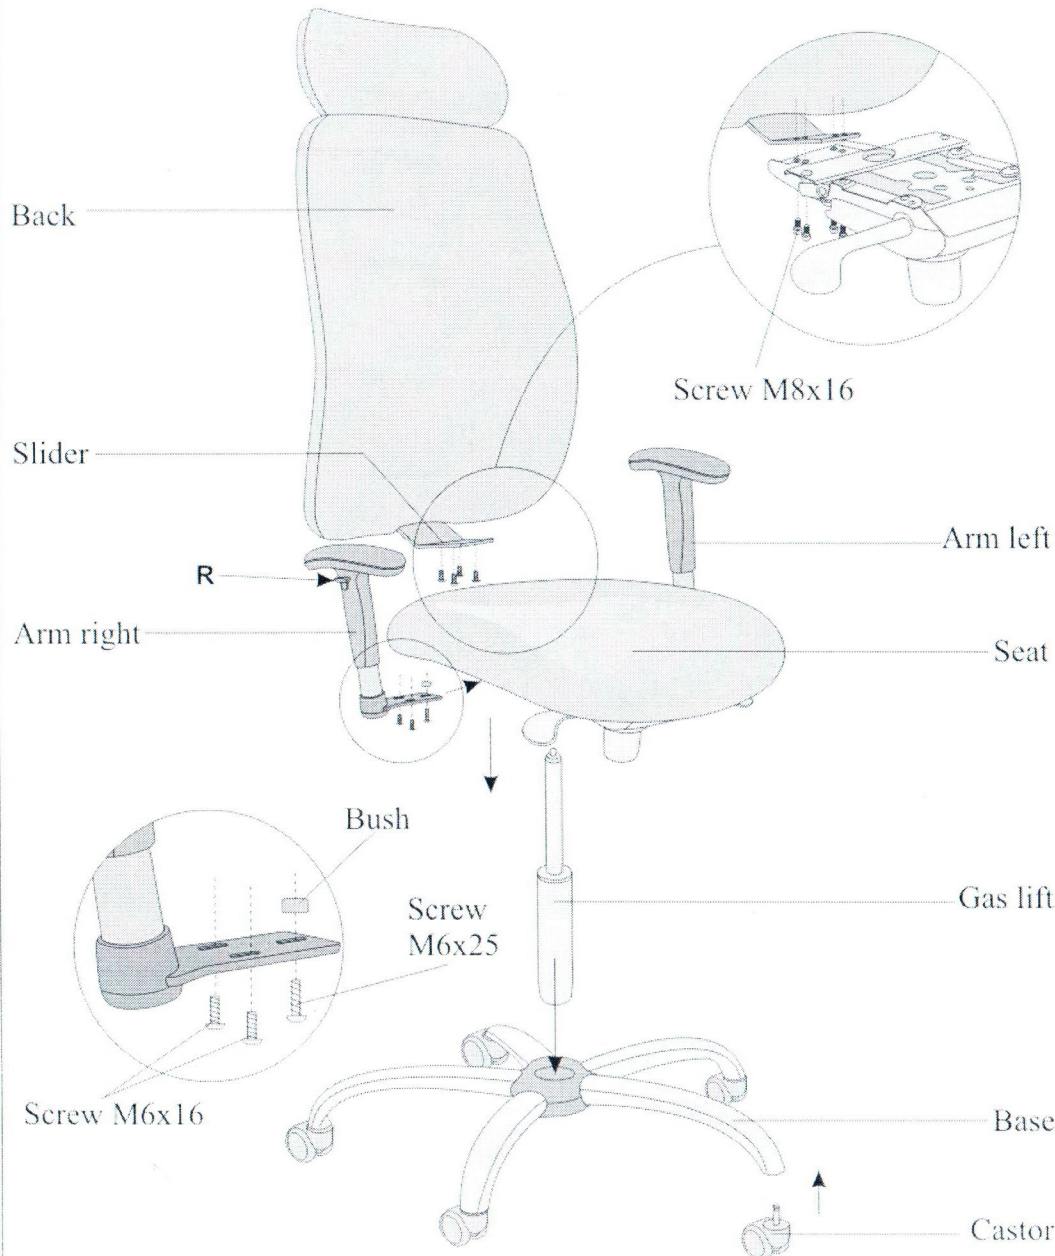

### ASSEMBLY

1. Insert castors into base.
2. Insert the gas lift into base.
3. Firmly locate the tapered end of the gas lift into locating hole in the seat.
4. Slider device to the seat base and tighten screws M8x16.
5. Fit arms to seat with screws and bushes.

### ADJUSTMENT

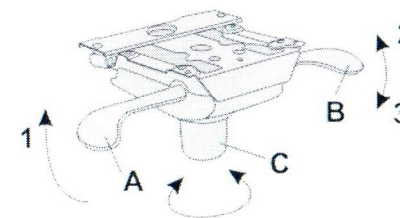

- A1 - Gas height adjustment
- B2 - Free floating
- B3 - Mechanism in locked position
- C - Tension adjustment knob

### Locking procedure:

- A) Find the desired position
- B) Push the left lever downwards

### Unlocking procedure:

- A) Pull the left lever upwards
- B) Give pressure to the backrest

- The arm height adjustment - R.
- Arm pad adjustment - left, right.

### MAINTENANCE

**Inspection** Inspect chair at least every six months to make sure all knobs, bolts and screws are tight.

**Vinyl upholstery** Wipe with damp cloth, moistened in a mild detergent solution. For unusual stains use commercial vinyl cleaner, following manufacturer's instructions.

**Fabric upholstery** Whisk or vacuum regularly. For unusual stains use commercial nylon cleaner, following manufacturer's instructions.

**Other surfaces** Wipe with a soft cloth, moistened in a mild detergent solution. Dry and buff lightly with a dry cloth.

#### Attention

Exchange and installation of gas-lifts should only be carried out by trained specialists.