
# **275DS**

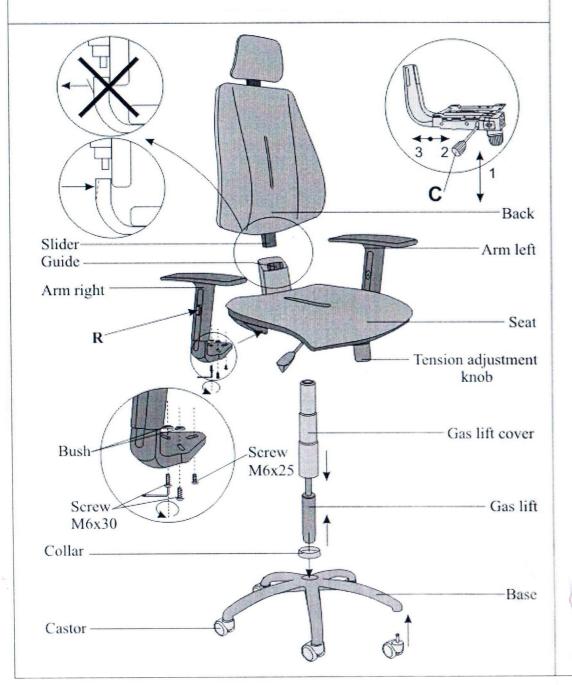

# ASSEMBLY AND ADJUSTMENT INSTRUCTIONS

Before beginning the assembly, please check that all parts are enclosed.

PART LIST	-	
	☐ 1 back	2 arms
	1 seat with seat base	☐ 2 screws M6x25
Ste	☐ 1 base	☐ 4 screws M6x30
る場合	☐ 1 gas lift	☐ 4 bushes
	1 gas lift cover with collar	□ 1 allen key
	☐ 5 castors	,

## **ASSEMBLY**

1. Press wheels onto chair base.

NOTE: H type wheels - onto soft base

W type wheels - onto hard base

- 2. Pull gas lift cover over the gas lift.
- 3. Insert cover collar into gas lift (from botton).
- 4. Insert the gas lift into base.
- 5. Fit arms to seat with screws and bushes.
- 6. Firmly locate the tapered end of the gas lift into locating hole in the seat.
- 7. Insert the back slider in the guide.

### **ADJUSTMENT**

•The Seat height adjustment - lever C.

Gas lift allows the adjustment of the seat height.

• The seat and back tilt adjustment - lever C.

By pushing lever C forward (2) and giving pressure to the back - allows the seat and back free floating.

By pulling lever C backwards (3) - the seat and back can be locked in desired position.

• The backrest height adjustment:

The backrest returns to the lowest position, once the highest position is passed. In order to adjust the backrest to your desired position first slide the backrest fully up and let itself to slide down, then gradually move up the backrest to the required position.

- The arm height adjustment R
- · Headrest angle adjustment.

#### MAINTENANCE

**Inspection** Inspect chair at least every six months to make sure all knobs, bolts and screws are tight.

Vinyl upholstery Wipe with damp cloth, moistened in a mild detergent solution. For unusual stains use commercial vinyl cleaner, following manufacturer's instructions.

**Fabric upholstery** Whisk or vacuum regularly. For unusual stains use commercial nylon cleaner, following manufacturer's instructions.

Other surfaces Wipe with a soft cloth, moistened in

a mild detergent solution. Dry and buff lightly with a dry cloth.

#### Attention

Exchange and installattion of gas-lifts should only be carried out by trained specialists.