


276DS

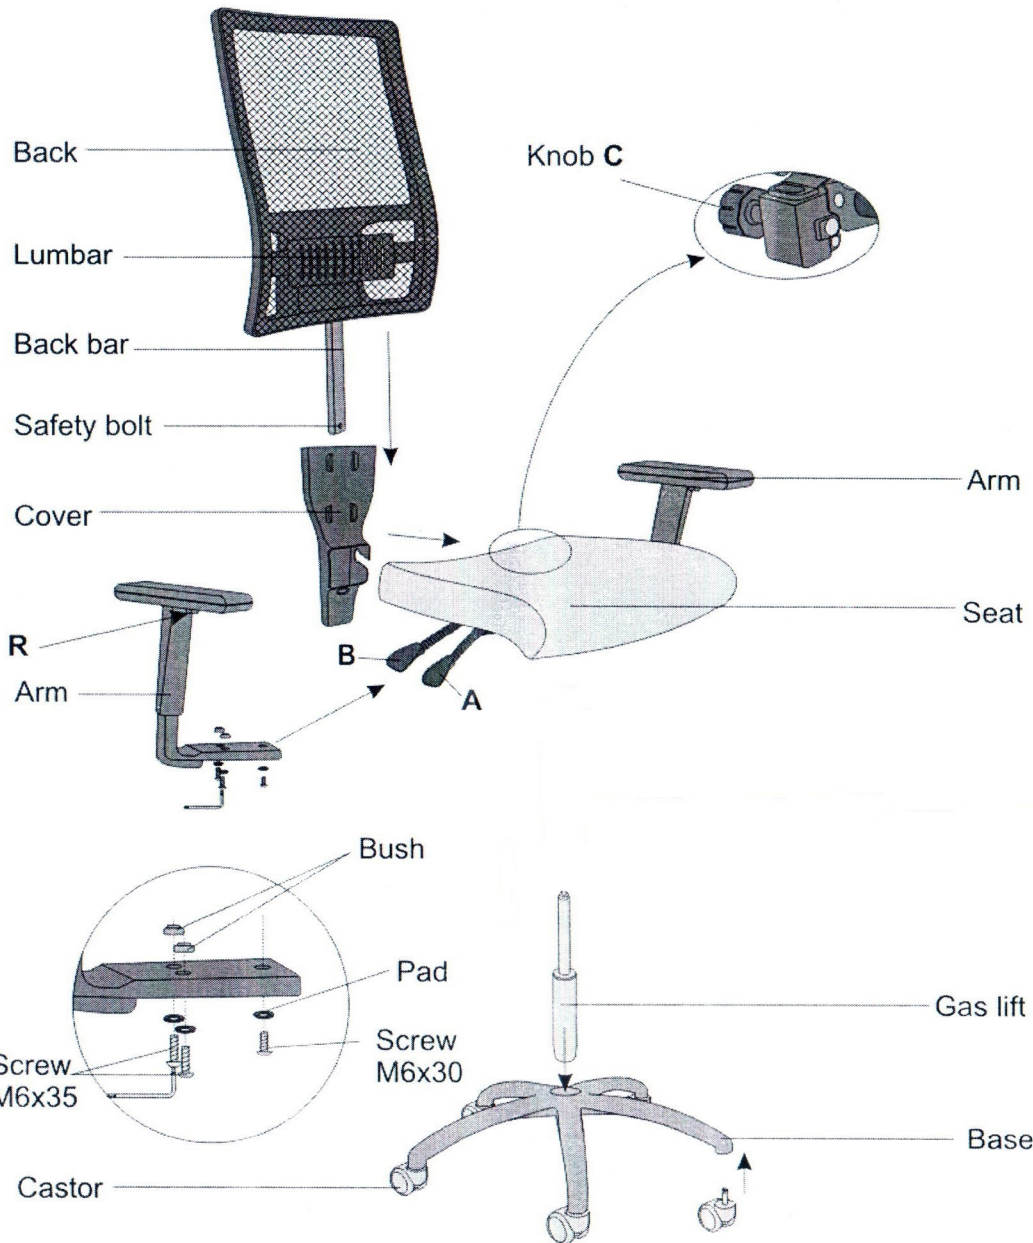

ASSEMBLY AND ADJUSTMENT INSTRUCTIONS

Before beginning the assembly, please check that all parts are enclosed.

PART LIST



- | | |
|---|---|
| <input type="checkbox"/> 1 base | <input type="checkbox"/> 2 screws M6x30 |
| <input type="checkbox"/> 5 castors | <input type="checkbox"/> 4 screws M6x35 |
| <input type="checkbox"/> 1 gas lift | <input type="checkbox"/> 4 bushes |
| <input type="checkbox"/> 1 seat | <input type="checkbox"/> 6 pads |
| <input type="checkbox"/> 1 back with back bar | <input type="checkbox"/> 2 arms |
| <input type="checkbox"/> 1 back bar cover | <input type="checkbox"/> 1 allen key |

ASSEMBLY

1. Insert castors into base.
2. Pull gas lift cover over the gas lift.
3. Insert the gas lift into base.
4. Fit arms to seat with screws, bushes and pads
5. Insert the back bar cover into seat base.
6. Firmly locate the tapered end of the gas lift into locating hole in the seat.
7. Insert back bar through cover into the seat hole so that the safety bolt is below seat handle (in order to protect back from sliding out of seat base) and tighten up knob C

ADJUSTMENT

- The Seat height adjustment - lever **A**.
Gas lift allows the adjustment of the seat height.
- The back tilt adjustment - lever **B**.
By pushing lever **B** upward - the back can be free floating.
By pulling lever **B** downward - the back can be locked in desired position.
- The back height adjustment - knob **C**.
By releasing knob **C** the back can be moved up and down.
Place the back at desired position and retighten knob **C**.
(1. Minimal bottom location of back pad is at the height of upper surface of seat pad. Back adjustability height below this level is unacceptable.
2. Maximal upper location of back pad is at the height of hole in connector cover. Back adjustability above this level is unacceptable.)
- The arm height adjustment - **R**
- Lumbar support height adjustment.

MAINTENANCE

- Inspection** Inspect chair at least every six months to make sure all knobs, bolts and screws are tight.
- Vinyl upholstery** Wipe with damp cloth, moistened in a mild detergent solution. For unusual stains use commercial vinyl cleaner, following manufacturer's instructions.
- Fabric upholstery** vacuum regularly. For unusual stains use commercial nylon cleaner, following manufacturer's instructions.
- Other surfaces** Wipe with a soft cloth, moistened in a mild detergent solution. Dry and buff lightly with a dry cloth.
- Attention**
Exchange and installation of gas-lifts should only be carried out by trained specialists.