
# T31

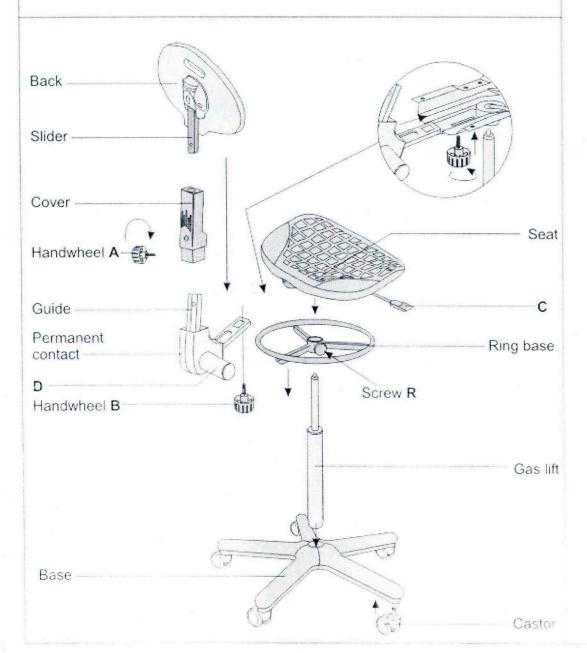

# ASSEMBLY AND ADJUSTMENT INSTRUCTIONS

Before beginning the assembly, please check that all parts are enclosed.

PART LIST	☐ 1 base	☐ 1 ring base
-	☐ 5 castors	☐ 1 guide cover
de	☐ 1 gas lift	☐ 1 back with slider
V 965	☐ 1 seat	☐ 1 handwheel A (short)
	1 permanent contact	☐ 1 handwheel <b>B</b> (long)

#### **ASSEMBLY**

1. Press wheels onto chair base.

NOTE: H type wheels - onto soft base

W type wheels - onto hard base

2. Insert the gas lift into base.

3. Slide over the gas lift ring base and fix with screw R.

4. Firmly locate the tapered end of the gas lift into locating hole in the seat base.

Connect permanent contact device to the seat and tighten handwheel B. Slide the cover over the guide.

6. Insert the back slider in the guide and tighten handwheel A.

## **ADJUSTMENT**

The seat hight adjustment - lever C.

Gas lift allows the adjustment of the seat hight.

The back height adjustment - handwheel A.
By releasing handwheel A the back can be moved up and down.

Place the back at desired position and retighten handwheel A.

• The back depth adjustment - handwheel B.

By releasing handwheel B the back can be moved forward and back.

Place the back at desired depth and retighten handwheel B.

•The back tilt adjustment - knob D.

Place the ring base at desired position and retighten screw R.

#### MAINTENANCE

**Inspection** Inspect chair at least every six months to make sure all knobs, bolts and screws are tight.

Vinyl upholstery Wipe with damp cloth, moistened in a mild detergent solution. For unusual stains use commercial vinyl cleaner, following manufacturer's instructions.

**Fabric upholstery** Whisk or vacuum regularly. For unusual stains use commercial nylon cleaner, following manufacturer's instructions.

Other surfaces Wipe with a soft cloth, moistened in

a mild detergent solution. Dry and buff lightly with a dry cloth.

### Attention

Exchange and installattion of gas-lifts should only be carried out by trained specialists.