


**INSTRUCCIONES DE MONTAJE
SILLON ALBERCA
319NE/319CR**

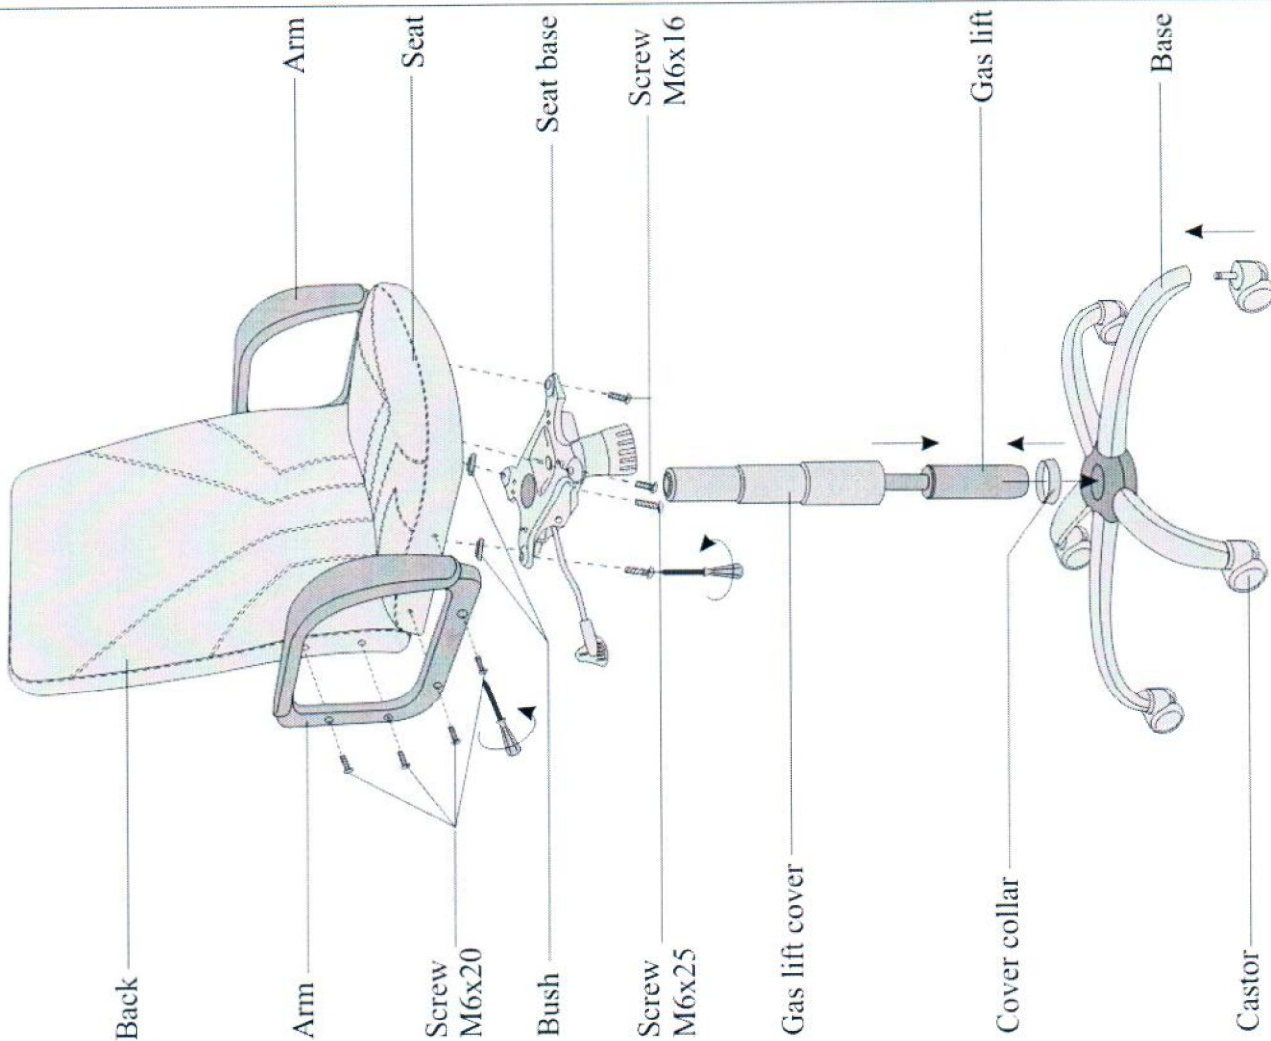

ASSEMBLY AND ADJUSTMENT INSTRUCTIONS

Before assembling, check to see if all parts are enclosed!

Additional tool needed for assembly: Phillips tip screwdriver.


- PART LIST :
- 1 Seat
 - 1 Seat base
 - 1 Back
 - 1 Gas lift
 - 5 Castors
 - 2 Arms (R+L)
 - 1 Base
 - 1 Gas lift cover with collar
 - 8 Screws M6x20
 - 2 Screws M6x25
 - 2 Screws M6x16
 - 2 Bushes



ASSEMBLY

- a) Insert castors into a base.
- b) Pull gas lift cover over the gas lift.
- c) Insert cover collar into gas lift (from bottom).
- d) Insert the gas lift into a base.
- e) Fit arms to seat & back with screws M6x20.
- f) Fit seat to seat base with screws M6x16 and screws M6x25 with bushes.
- g) Firmly locate the tapered end of the gas lift into a hole in the seat.

ADJUSTMENT

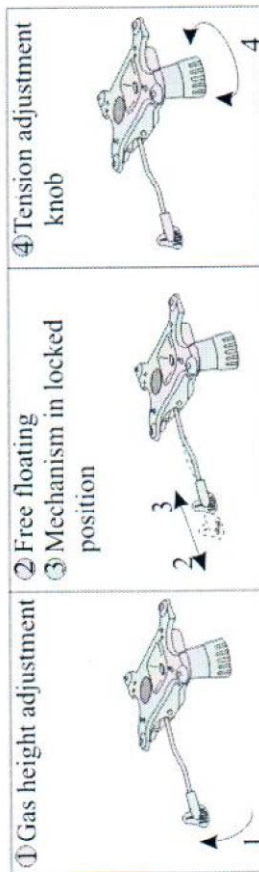

MAINTENANCE

Inspection inspect arm-chair at least every six months, to make sure all screws are tight.
Upholstery Whisk or vacuum regularly. For unusual stains use commercial nylon cleaner, following manufacturer's instructions.
Over surfaces Wipe with a soft cloth, moistened in a mild detergent solution. Dry lightly with a dry cloth.

Attention
 Exchange and installation of gas-lifts should only be carried out by trained specialists.