




PIQUERAS Y CRESPO

# MY CHAIR LOWERS ITSELF!

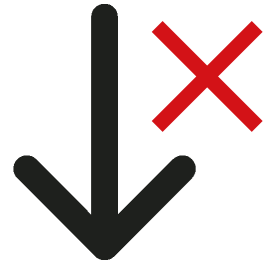

GAS LIFT EXTRACTOR

---

PIQUERAS Y CRESPO




## After-sales service

Solutions to your problems



### Reduce

Use only the materials necessary

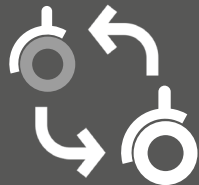

### Compatibility

We use common components to guarantee repair in a few years time



# AWARENESS SUSTAINABLE

## Repair your office chair

If your chair lowers itself when you sit down, even without activating the height adjustment lever, chances are that the life of the gas lift has come to an end.

Don't worry, you don't have to buy a new chair.

You just need to replace that component.



# DON'T SPEND BUYING A NEW CHAIR

**Repairing the gas is now super easy.**

Removing the gas piston has always been a puzzle, even more so if you've been using your buggy every day for more than a year.

But don't worry, with our gas lift extractor you can forget about the knocks.

Now you can repair your buggy in 5 minutes.



# EXTRACTOR KIT GAS LIFT



## What do we send you?

- Instructions for use.
- Gas compatible with your wheelchair.
- Extractor kit.



**WE RAISE THE  
SEAT TO THE  
MAXIMUM**



max.



# CLAMPS

IMPORTANT, CLEAN THE GAS BEFORE PUTTING THE CLAMPS ON WITH A CLOTH.

THE BLIND CLAMP SHOULD BE AS CLOSE AS POSSIBLE TO THE MECHANISM.

THE CLAMP SHOULD BE POSITIONED LOOSELY, SO THAT IT CAN MOVE ALONG THE GAS.

THE CLAMP WITH HOLES, TIGHTENED JUST BEHIND THE FIRST ONE..



# SCREWS

## TIGHTEN AT THE SAME TIME

PLACE THE SCREWS IN THE SECOND CLAMP AND TIGHTEN WITH THE ALLEN WRENCH.

IMPORTANT, TIGHTEN BOTH SCREWS AT THE SAME TIME TO AVOID BLOCKING.

CONTINUE UNTIL THE GAS IS SEPARATED FROM THE SEAT.





# HAMMER WITH CARE

YOU HAVE TO GIVE A SHARP BLOW ON  
THE BOTTOM OF THE GAS.

BE CAREFUL NOT TO BREAK THE BASE  
OF THE CHAIR.

ONCE DONE, INSERT THE NEW GAS AND  
YOU WILL HAVE A CHAIR AS GOOD AS  
NEW.





PIQUERAS Y CRESPO

# MY CHAIR LOWERS ITSELF!

GAS LIFT EXTRACTOR

PIQUERAS Y CRESPO

